

PEG OPC PRODUTCS

MOQ:50pcs for each model

PEG No.	For use in HP
H260-D	CP4025/4525
H530-G	CP2020/2025/CM2320/2323;Canon LBP-7200C
H740-G	CP5225/CP5525,Canon LBP9100/9500/9600;
H2612-D	LaserJet 1010/1015/1020/3015/3020/3030/3050/3052/3055; Canon LBP-1900/2900/3000/FX9/FX10
H2400-D	LaserJet 2400/2410/2420/2430;Canon LBP-3410
H1320-D	LaserJet 1320/1160/3390/3392/P2015
H7516-D	LaserJet 5200/M5025/5035;Canon LBP3500/3900/3920/3950/3970
H6000-D	Color LaserJet 1600/2600/2605;CM1015/1017;Canon LBP-5000/5100
H3500-D	Color LaserJet 3500/3550/3700
H4600-D	Color LaserJet 4600/4650;Canon Imageclass C2500, Canon LBP 2510/5500/EP-85
H5500-D	Color LaserJet 5500 /5550; Canon LBP 2710/2810/5700/5800/EP-86; Canon Imageclass C3500
H7553-D	P2014/P2015 Series
H7551-D	P3005 Series,MFP 3027/3035
H436-D	LaserJet P1005/1006/1007/1008/1102/1506/1606/M1120/1136/1210/1522; Canon LBP-3018/3108/3050/3100/3150/3010 (CE278A/CE285A)
H540-D	ColorLaserJet CP1215/CP1515n/CP1518ni/CM1312/1415/CP 2025/2320
H364-D	LaserJet P4014/4015/4515
H505-D	LaserJet P2035/2055 ,Canon LBP6300/6650
H255-D	LaserJet P3015
H250-D	Color LaserJet CP3520/3525 /3530/4025/4525 (CE250/260 series); Canon LBP-7700C
H6015-G	Color LaserJet CP6015/6030
H3000-D	Color LaserJet 3000/3600/3800; Canon Color LBP-5300/5360/5400; MF8450/9150/9170
PEG No.	For use in CANON
C1018-G	IR 1018/1022
C1600-D	IR 1600/2000/2300
C2018-G	IR 2016/2018/2020/2022/2025/2030
C85-G	IR 2510/5500
C2520-G	IR 2520(without gear)
C2230-G	IR 2230/2270/2830/2870/3530/3570/4570
C3300-D	IR 3300;GP200/210/215/220/225/300/335/400/405
C2200-D	IR 330/400/2200/2800
C2880-G	IR C2880/C3380/3880
C3220-G	IR C2620/3200/3220;HP9500
C1215-G	NP 1015/1215/1218/1318/1510/1530/1550/1820/2010//2020/2120/6221
C6016-G	NP 6016/6218/6521/6621,C160/200
C7160-G	NP 7160/7161/7162/7163/7164/7210
C16-D	E16/E20/E30/E31/E40, FC 210/220/230/270/290/298/310/330, PC300/310/320/325/330/355/400/420/430/530/550/710/720/730/740/745/ 770/775/785/790/795/920/921/950/980

C65-G	Image Class 2300,LBP 1420/1510/1710,
PEG No.	For use in EPSON
EM4000-G	M4000;
EN3000-G	EPL-N3000; Xerox Phaser4500;
E3800-G	C3800
E1100-H	Aculaser C1100/CX-11F
E1000-A	Aculaser C1000/C2000
E900-A/G	Aculaser C900/C1900
E1220-D	EPL-1220;LP7100
E6200-D	EPL-6200/L
E5700-A	LP-800/S/900/1200/1300/U/1800/1900/N/2200/2400; EPL-5500/W/5700/5800/5900/L/6100/L
E2120-G	LP-7700/8100/8700/8700 PS3/8900/EPL2120
E8200-E	LP-8200/8200PS
E8300-A	LP-8300S/8300F/8400FX/FXN/8600/F/FX/FXN/8300F/N2010/N1610/N1210
E9600-G	LP-9600/EPL-N4000
E9400-A	LP-9400/ EPL-N7000/Minolta PagePro 9100
	LP-9300/EPL-N2700/2750
E9200-A	LP-9200/EPL-N2000/N2000
PEG No.	For use in BORTHER
DR200-H	HL 720/730/730Plus/730DX/730DX Plus/760/760Plus/760DX/760DX
DR300-H	HL 820/1020/1040/1050/1060/1070/1160
DR350-D	DR350/DR360/DR2000/DR2050/DR2100/DR20J, HL 2030/2040/2070N/2140/2170W,Fax-220/2920, MFC 7220/7225N/7420/7440/7820/7840N DCP 7010/7020/7030/7040; Fuji Xerox DocuPrint 203A/204A
DR400-E	HL 1030/1240/1250/1270N/1400/1440/1450/1470N/PB1630; DR6000;Fax- 4100/4750/5750;MFC9600/9750/9800
DR420-H	HL 2130/2220/2230/2240/2270; MFC-7360/7460/7860
DR500-D	HL 1650/1670N/1850/1870N/5030/5040/5050;
DR510-H	HL 5140/5150/5170, MFC-8220/8440/8640/8840, DCP-8040/8045
DR520-D	DR520/DR3100/DR3115/DR620/DR3125; HL 5240/5250/5280/5340/5350/5370; DCP8060/8065; MFC 8460/8860/8870;DR620/3125
DR600-H	DR600/DR4000; HL-6050D/6050DN/6050DW
DR700-H	DR700/DR5500;HL-7050/7050N
4040-H	DR110/DR150/DR190, HL4040/4050/4070, MFC9840/9640/9450/9440, DCP9040
3040-H	DR210/DR240/DR290, HL3040/3070, MFC9010/9120/9320
PEG No.	For use in SAMSUNG
S5000-D	SF-5000
S550-D	ML-200/250/1010/1210/1220/1250/1430/4300/4500/4600/SF550
S1610-D	ML-1610/2010/2510/2570/2571N,SCX4321/4521
S2150-D	ML2150/2151N/2152W/2550/2551N/2552W
S3050-D	ML3050/3051,SCX5530

S3470-H/D	Samsung ML-3470/3471N; Xerox Phaser 3435/3635MFP
S3560-D	ML-3560/3561N/3561ND/3562W
S2850-D	ML-2850/2851/2852/1910/1911/1915,SCX4600/4824,ML1910
S4216-D	ML-700/1510/1520/1710/1740/1750/SF560;SCX-4100/4200/4116/4216F
S5100-D	ML-5100/530
S2250-D	ML-2250/2251,SCF-4520/4720
S1640-D	ML-1640/1641/2240/2241/2245
S6320-G	SCX-6120/6220/6320 /6520
S6345-H	SCX-6345
ST104-G/G	ML-1660/1665
S600-H	CLP-600/650/CLX6200/6210/6240
S610-H	CLP-610/660
S300-H	CLP-300/CLX-2160/3160; Xerox Phaser 6110
PEG No.	For use in LEXMARK
L260-S	E260/360/460,Dell 2230/2330/2350/3330/3335;
L840-D	W840
L215-D	T610/612/614
L650-S	T650N/652N/654N/X650/X654,Dell 5230/5530/5535;
L820-D	W820
L630-D	T630/632/640/642/644/646
L1250-D	OptraS1250/1250N1255/1620/1625/1650/1650N/1855/2420/2450/2455
L120-D	E120
L420-D	T420/430
L230-D	E230/232/330/332/340
L320-D	E320/E220
L935-G	C935/C945(without gear)
PEG No.	For use in IBM
I32-G/D	IP24/32/40/1145/4324/4332
I1130	IP1352/1372/1532/1552/1572/4059/1120/1125/1130/1140
I1410-G	IP1222/1410/1412/1422
I1116-G	IP1116/1312
PEG No.	For use in MINOLTA
	QMS PS410/420/460
	QMS PS 810/815/820/825
M1300-D	Pagepro 1100W/1200W/1300W/1350/1400;Minolta SP-302/PagePro 6e/6L/Pageworks 6e/6L/Fax 2500/3500/5500
	QMS 1700/1725/PS1700/PS1725/1725SLS PS
	SP1000/1500/1700/SP6 ; QMS1060
	270/280/290/310
M2300-A	QMS 2300/2400,Xerox P6115/6120
M152-G/D	Di152/159/162/183/1611/2011;DR114 7115/7118/7216/7220/7516/7521/7616/7622
M250-D	Di250/350/351/451/2510/3510;Lexmark w810
M300-D	Bizhub C250/252/300/352

M350-D	Bizhub C350/450,8022/CF2203; Oce CS180
M253-G	C203/C253/C353/C220/C360
M4650-C	MC4650
M2350-G	MC 2350
PEG No.	For use in PANASONIC
P2310-G	DP 2310/ 2330/3010/3030
P3204-E	UX745/755/755E
P3100-A	GX-3100
P3313-E	UF-550/650/850/770/880/885/895/DF1100/ UG3313
P3317-E	UF-744/788 UG3309/3317
P3350-E	UF-585/595/UG3350(PB-1530)
PFA78-A	FL501/502/503/523/FLM551/552/553/FLB751/752/753/755/756/758/FA77/78A/KX-FP503/526
PFA84-A	FL511/512/513/541/543/611/613(without gear)
PEG No.	For use in XEROX
X5500-D	Phaser 5500/DP405/DP505/DC286/DC450i; Lexmark X850/852/854
X8-D	DP P8e/ex,WorkCentre 385/390
X3110-D	Phaser 3110
X210-D	DP 210/211
X2025-D	DP N2025/2825
X24-D	SP N24/N32/N40/N4525/DX/CX/FN
X3450	Phaser 3450
X3115-D	Phaser 3115/3116/3120/3121/3130
X3117-D	Phaser 3117/3122,PE220,
X3110	DP C2100/C3210/C3290;Dell 3110/3115;
X3428-D	Phaser 3300MFP/3428/3435/3635MFP; Samsung ML3050; SCX-5530FN
X120-D	Phaser 3150/PE120
X118-D	DC M118/C118/C123
X156-D	DC 156/186
X420-D	DC 220/230/280/235/285/405/420; WC 423/428
X400-G	DC C400/C450, DPC 2220/2221
X7700-G	Phaser 7700/7750/7760 (without bearing) Color Copier
X2200	DP C2250 DP C2255/3360;DC-III C2200/2205/3300/4400;DC-IV C2260;ApeosPort-III C2200/3300; ApeosPort –IV C2270/3370/4470/5570
X3100	Phaser 3100/MFP3100/Ricoh 2000L;OKI B2520
X415-D	WC 315/320/415/420
X5016-D	WC5016/5020,DC1080/2003
X32-D	F469 N24/N32/N40
X412-D	WC412/M15; Ricoh AC204; Samsung SCX-5315
X3500-D	Phaser 3500/3600; Samsung ML-3560
X4150-G/H	WC4150;
X12-E	DC C12/1250/1255
X240	DC C240/250/5065/6550/750I/
X3055-H	DP-2065/3055
X4510-A	Phaser 4500/4510; OKI B6500/Minolta 5650EN/Epson M4000

X20-G	WC M20/C20; Samsung SCX-6320F;M4118
X3155-D	Phaser 3140/3155/3160;
X1100-H	C525A/C2090; Epson Aculaser C1100/CX-11F/LP-V500; Dell 3000/3100
PEG No.	For use in OKI
B2500-E	B2500/2520/2540; RICOH 2000L/SP1000/1100
B4300-G	B4300 Oki Data B4100/4200/4250/4300/4350; B410/420/430/440/460/470/480
B6200-G/A	B6200/6300; Xerox DP240A/340A;
B4400-G	B4400/4500/4550/4600
C5600-G	C5100n/C5200n/C5300n/C5400/C5600/C5700/C5800/C5900
C3300-G	C3300/3400/3520/3530/3600
C9300-G	C9300
C7100-G	C7100/7350/7500/7550
C9600-G	C9600/9650/9800/9850
C110	C110/130;Minolta 1600
PEG No.	For use in SHARP
AR158-D	AL 1000/1010/1041/1200/1220/1240/1250/1521/1631/1641/1651; Xerox WC XD100/102/103F/105F/125/130/130F/155F/155DP/152/153/158
AR160-D	AR 160/161/163/N/200/201/N/205/206/207, AL-1600/AL-2000,SF-1818/1820
AR270-D	AR 270 AR 215/235/255/271//275/M236/M276 Copier
AR280-D	AR M280/M350/M450; OKIB8300; Hitachi Beam Star M-7350/7450
AR351-D	AR M351 ARM451,Sharp AR-M355/M455; Sharp MX-M350/450
AR256-D	AR 256
AR505-E	AR505
AR550-E	AR550/620/700
AR-2600	AR MX2600/3100
AR2300-H	AR MX2300N/MX2700N/MX3500N/MX3501N
PEG No.	For use in Ricoh
R231-H	SP C231/310
R220-E/A	SP C220/221/222
R3400	SP 3400/3410
R1015-D	AFICIO1015/1018/1018D/2015/2016/2018/2018D/2020/2020D/220/270/3025/3025P/3025S P/3025SPF/3025SPI/3030/3030P/3030SP/3030SPF/3030SPI, AFICIOIMP1600/1600SPF/2000/2000L/2000SPF/2500/2500SP/P2500SPF/2510/2510P/2510SP/2510SPF/2510SPI/2550/2550B/2550SP/2550SPF/3010/3010P/3010SP/3010SPF/3010SPFI/3010SPI/3350/3350B/3350SP/3350SPF,NX800/810
R600-D	NX600/610/700/710(Type 700),Aficio 180(Type 185) , Aficio AP2000/2100;Casio CP3900/7400/7500(CP-DTC5);Fujitsu LB-313
R200-D	Aficio 200/250
R920-H	NX920;Aficio1035/1035P/1045/1045P/2035/2035E/2035EG/2035G/2035S/2045/2045E/2045G/2045S/3035/3035G/3035SP/3035SPF/3035SPI/3045/3045G/3045SP/3045SPF/3045SPI/340/350/350E/355/355E/450/450E/455/455E/AP4500/AP4510/MP3500/MP3500P/MP3500SP

PEG No.	For use in TOSHIBA
T455-G	E-Studio 455
T163-D	E-Studio 163
T1250	DP 1250/1450
T16	E-Studio 16/20/25
T168-D	E-Studio168/158/169/208/209/258/259
T190-G	E-Studio 190P
T220-G	E-Studio 220P
PEG No.	For use in KYOCERA MITA
k1010-G	FS1010
K180-G	TASKALFA 180
K1530-G	KM1525/1530/1570/2030/2070
K1620-H/G	KM1620/1635/1650/2020/2035/2050
K720-G	FS720/820/920(without gear)